Tips & Tricks

General

Here you will find information about general issues concerning the operation of the RepRap Industrial in your specific work environment.

Setting a static IP address for RepRap Industrial ethernet connection

Use SSH on your computer connected to the same LAN as your 3D printer to log in to the RepRap Industrials' built-in BeagleBone Black. You can use the hostname from the printers' Backend-URL and log in with the following access data:

```
User: kiosk
Password: eight-digit combination from the serial number at the back of the
device. Take the first two four-digit blocks - XX-AAAA-BBBB-CCCC-YYYY
becomes an "AAAABBBB" password.
```

Edit the network configuration via the command line editor "nano"

```
sudo nano /etc/network/interfaces (use the above user and password)
```

The current DHCP setup looks like:

```
# The primary network interface
auto eth0
iface eth0 inet dhcp
pre-up iptables-restore </etc/iptables.rules</pre>
```

Change the setup according to your needs.

```
Example:
    # The primary network interface
    auto eth0
    iface eth0 inet static
    address 192.168.1.20
    netmask 255.255.2555.0
    network 192.468.1.0
    broadcast 192.168.1.255
    gateway 192.168.1.254
    dns-search family.local
    dns-nameservers 192.168.1.254
    pre-up iptables-restore </etc/iptables.rules</pre>
```

The rest of the file remains unchanged. Save the file using CTRL+X and confirm the overwrite query with "Y". Disconnect and finish by typing

exit

Shut down (see Manual control) and reboot (power-on button, 11 in fig. 4) the RepRap Industrial to establish the alterations.

Changing Shell Password in the BeagleBone Black Operating System

After manually creating a new Micro-SD Card from a pre-packaged upgrade release provided by *Kühling&Kühling*, the user account running the RepRapOnRails software in the Linux operating system will be in default configuration. To change the password, use SSH on your computer connected to the same LAN as your 3D printer to log in to the BeagleBone Black. You can use the hostname in the printers' Backend-URL as its address and log in with the following access data:

User: kiosk Password: kiosk

Now you can set a new password by entering

passwd

and following the instructions. In delivery condition the unique password is an eight-digit combination from the serial number at the back of the device. Take the first two four-digit blocks (example: XX-AAAA-BBBB-CCCC-YYYY becomes an "AAAABBBB" password).

Filament quality check

Much to our regret, filament manufacturing is not subject to standardization yet. Although we try to provide material of high quality and stable dimensions, manufacturing faults cannot be totally excluded.

If you order filament of other suppliers, please check back that it is within the stated tolerances. Some manufacturers offer a nominal "3 mm" filament which really is 2.85 mm in diameter, while others indeed sell 3.00 mm.

If you note that material purchased via Kühling&Kühling does not meet the standards we set here, please let us know and we will promptly replace the material. We only ask you to send back the flawed material (return note will be included in the new delivery) so that we can discuss the matter with our supplier.

If you experience increased problems with grinding at the drive gear, first thing to check is the quality of the filament currently loaded:

- Is the diameter correct?
- Is the filament round?
- Is the filament free of bulges and kinks?

INFO



To make sure that there is no problem in the filament feed system, try the following:

• Remove the filament feed hose from the filament inlet (push the blue fixing ring and pull the hose out).



• Feed the filament directly through the hose and try printing. If the problem remains, check the filament as described.

Refit the hose afterwards!

Diameter

Measure the diameter at several points (at least 5 per 0.5 m).

Measure at least twice (best thrice) at each point at an angle of 90° (60°). The diameter must not deviate from

```
2.85±0.1 mm (2.75 ... 2.95 mm)
```


A diameter of e.g. 2.98 mm will increase friction in the filament feed system and the nozzle barrel and cause compression and jamming of the filament.

 
A diameter of 3.00 mm will no longer fit through the filament feed inlet.


Filament below 2.75 mm is, especially when a print job requires a lot of retraction movement, likely to jam the nozzle barrel because molten filament can push itself back up the barrel and form a plug.



First measured diameter.

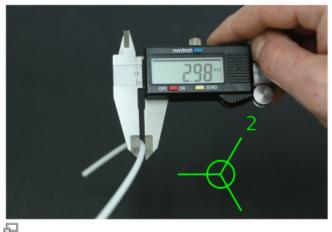



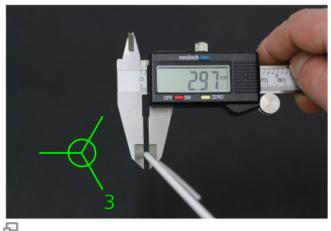

Third measured diameter - this filament exceeds the stated tolerance and must be replaced.

Roundness

Measure two times at the same point. If one diameter deviates from the stated tolerance or if both diameters differ strongly, the filament is out of round and must be replaced.


Out of round filament, even when meeting the admissible values, is likely to form a plug inside the nozzle barrel because molten filament can push itself back up past the main strand.



The measured diameter is below the admissible tolerance ...



Measured at the same position, turned 90°. The diameter now exceeds the tolerance - the filament is out of round and must be replaced.

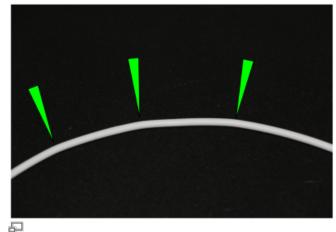

Visible kinks in the filament may also lead to jamming.

Slicing

Any information we gather related to improving or easing the slicing process is listed in the following paragraphs.

Kinks and bulges

Visible quality failure such as kinks or bulges may also increase the friction in the filament feed system. Check for visible deformation.

This bug will be fixed with the upcoming release of SLic3r v1.2.x.

It is a known problem that in Slic3r for Windows the drop-down lists for the profile selection are too narrow to display the full profile name. This can make it impossible to choose the correct profile when processing your slicing settings for creating a G-code.


		Sick	- 0
e Plato Nindon Poly der Print Gettings Transf	Internet Restartioner		
- editerior	Second completes		
Multi- attingktuding taptag attingktuding taptag attingktuding taptag	Finit size Finit special Z officie	n 200 p 100 nm n 140 p 200 nm 0 nm	
prophotokia (skola profi	Roman .		
	il-sonie favor: Ene estative E-dataveau	Taphag (diatin/liphnes/Reparie) =	
	Castilles	2 10	
	Advanced		
	Dia fermanatianan Térdén kelj	2 10	

Narrow menus make it impossible to read the profile names in Slic3r v1.2.0 for Windows

Try the following to bypass the problem:

- Select a profile from the drop-down list and click the <save> symbol. This way, you make the profile name visible and editable.
- Delete the current profile name and replace it with a short description, e.g. "LEFT ONLY" instead of "Kuehling&Kuehling RepRap Industrial -LEFT EXTRUDER ONLY".
- The shorter description will be fully visible in the list.

Repeat these steps for all long profile names.

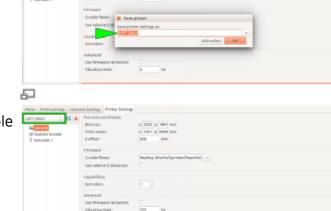

Overhang - adjusting the layer thickness

If you want to print filigree objects with overhanging structures without adding supports, try reducing the layer thickness for this print by 15 - 20%. This will result in a finer Z-axis resolution and increased overlay of subsequent layers so that more stability is gained over the height of the target object.

됩

됩

First layer

The adhesion of the first layer to the print bed is extremely important to minimize warping (see this article also). To optimize the adhesion, some Slic3r settings should be adjusted.



INFO

The following applies to the nozzle tip size 0.35 mm and the preset Slic3r profiles you installed during initial commissioning. It is meant to give you an overview of the settings relevant for the optimization of the first layer adhesion. Please experiment to find the settings best suited for your task and test all settings before applying them to your final model if you use other nozzle sizes.

• Set the layer thickness of the first layer ("First layer height") to a value equaling the diameter of the nozzle tip bore and



Slic3r Print Settings - setting the first layer height

prapindustrial_) ; 📓 🔍	Extrusion width Default extrusion width:	0	man or % (leave 0 for auto)
Layers and perimeters	First layer:	192%	man or % (leave a for default)
avrill D Speed	Perimeters:	0.5	min or % (leave-t) for default)
Speed Skirt and brim	will:	0	min or % (leave d for default)
Support material	Solid infil:	0	mm or % (leave d for default)
Notes	Top solid infill:	0	mm or % (leave 0 for default)
Output options Multiple Extruders	Support material:	0	mm or % (leave 8 for default)
Advanced	Flow		
	Bridge Rownatio:	1	
	Other		
	Threads:	2	1 (more speed but more memory usage)
	Resolution:	0	nn .
	eck for updates at http://slic		

layer extrusion width

• increase the extrusion width to 150 %.

Both measures compensate for unevennesses of the print bed and increase the tolerance against slight leveling mistakes. The distance between nozzle tip and print bed will assure that the bore is not clogged when passing convex bumps by leaving enough free space in between. The extrusion width will Slic3r Advanced Settings - reducing the first make sure that enough material is conveyed to equalize concave crudities.

• Make sure that the first layer extrusion speed does not exceed 25 mm/s

(less for nozzle tips ≤ 0.35 mm). Due to the higher heat transfer and the less sudden cooling the adhesion is increased.

eprapindustrial, ; 🔚 🔍	Speed for print moves		
Covers and perimeters	Perimeters:	25	nm/s
Layers and perimeters	Small perimeters:	25	mm/s or th
© Speed	External perimeters:	25	mm/s or %
Skirt and brim	WIE:	80	nn/s
🚊 Support material	Solid infil:	80	mm/s or %
Notes	Top solid infill:	80	mm/s or %
Output options	Support material:	80	nn/s
Wultiple Extruders Advanced	Support material interface:	100%	mm/s or %
 Achericas 	Bridges:	25	mm/s
	Gap Hit:	80	mm/s
	Speed for non-print moves		
	Travel	200	mm/s
	Nodifiers		
	First layer speed:	15	mm/s or %
	Acceleration control (advance	ed)	
	Perimeters:	0	mm/sr
	WR:	0	mm/s*
	Bridge:	0	mm/s ²
rsion 1.1.5 - Remember to ch	where have a	-	

Slic3r Print Settings - setting the first layer extrusion speed

prapindustrial.) ; 🔒	e Filament								
C filement	Diameter		2.85	66					
Caeling	Extrusion	n multiplier:	1						
	Temperat	tune (°C)							
	Extruder		First layer:	260	Other layers:	260	:		
	Red:		First layer:	100	Other layers:	108			

Slic3r Filament Settings - setting the first layer extrusion temperature

Plater	eviat settings	Filament Setti	ings Printer Settings		
neprap Li So So So So So So So So So So	industrial yers and perime rill eed at and brim pport material	ters Skirt Loop Dista Skirt Minir Brim Brim	H: Ince from object: height: mam extrusion length:	0	
Version	1.1.5-Retremb	er to check før a	polates at http://sliczo		

Slic3r Print Settings - adding a brim



Slic3r Print Settings - adding raft layers

Modifying infill and perimeters

There are currently two Slic3r profiles available at our GitHub repository that provide preset ready-toprint slicing settings. Her are some tips for handling these profiles to adjust them to your needs. The *SOLID* profile normally needs no modification since it comes with stable, reliable settings for printing solid objects with 100 % infill.

• Optimize the extrusion and print bed temperature for the filament currently installed.

Do not hesitate to try different settings here, since even colored additives may alter the optimal extrusion temperature.

• For filigree or thin-walled objects add a 3 to 6 mm brim and/or 3 to 8 raft layers to increase the effective adhering area (see Slic3r manual also).

The *ECO* profile supplies settings for objects with loosened infill. This makes objects lighter and reduces the print time and the material consumption. To achieve good results, the settings may have to be adjusted.

We recommend to set the following always for printing ECO objects:

- A hull thickness of 1.0 to 1.5 mm. As a rule of thumb divide the hull thickness by the nozzle tip diameter and set the amount of perimeters equal to the result. Such, a closed, smooth and stable hull is ensured.
- Honeycomb infill as it provides highest stability at optimal density.
- A minimum infill of 15 %.
- A maximum infill of 30 %. Increasing the infill further does not have a significant advantage compared to a solid body but strongly increases the printing time.

Operation

In the following you will find more detailed descriptions of functions of the RepRap Industrial. In most cases, these are topics upraised by support requests or in-house lab experiments.

Print bed leveling

The PEI print beds delivered with every RepRap Industrial are custom-made specially to our needs. Due to the manufacturing process, they may show bends and curves which can make handling them a bit tricky. These flaws are accepted due to the superior properties of PEI compared to other subsurfaces when printing ABS. Follow the tips given below and you should have no trouble achieving perfect results.

Of course, the PEI print bed is, like the whole RepRap Industrial, optimized for printing ABS. It also works fine with HIPS, PET-Copolyester, PVA and thermoplastic urethane (TPE-U). Other materials may require a different subsurface, be it another material or a special treatment with tape or glue. Find more information about materials and printing them with a RepRap Industrial in our knowledgebase.

Accurate leveling is vitally important for the print result. Although correct first layer settings can compensate for slight unevennesses of the print bed, false leveling will ruin a print within the first few layers. Evidence for a leveling mistake can be:

- 1. Asymmetrical layer thickness, especially of the first layer, due to lopsided leveling.
 - On one side of the print bed the extruded strand is laid on the print bed instead of being spread → the print bed and the nozzle are too far apart.
 - On the other side of the print bed the extruded strand is pressed onto

too close too far 3

the extruded strand is pressed onto $\overline{Leveling}$ mistakes: examples of characteristic

appearances of the first layer.

the print bed until the nozzle tip is clogged \rightarrow the print bed and the nozzle are too close.

- Smearing of the extrusion and possibly clogging of the nozzle due to too closely leveled bed.
- Strands do not stick to the print bed but are being pulled away by the nozzle tip. Of course, this can be due to a wrong bed temperature also – better double-check.
- 4. Extrusion of rounded, unjoined strands.

To avoid such irritations, make use of the following tips:


Leveling test is OK Leveling test is not OK

 Always make sure that the build chamber is adequately and uniformly preheated to at least 90 % of the target temperature (e.g. 63 °C for ABS).

The Z-end stop is temperature sensitive and may cause deviating positioning when exposed to temperature variations. Keep the build chamber doors as shortly open as possible during leveling to avoid too much heat loss.

- If you removed the print bed, always reinsert it in the same direction and orientation it had during leveling.
- Put the print bed with the convex side down onto the print table.
- After adjusting all three leveling points, return the print head to the first position (tap the [Back] button). Check the bed tip distance by tapping (not pressing) the print bed with a finger next to the nozzle tip: if you see a gap appearing at the slightest touch, the leveling point is correctly adjusted. If even the least pressure is required, the leveling is too high. Repeat this at the other two leveling points. Have a look at the adjacent videos for visual explanation.
- Before waisting time on unsuccessful leveling, please rethink if the currently installed nozzle tip is adequate for the print job. Wider nozzles are more tolerant when it comes to compensating leveling mistakes and may be more suited to the task, especially when printing larger parts.

 If you find it difficult to adjust the three leveling points uniformly with only the spring pressure, place a sheet of paper (not more than standard 80 g/m²) between the nozzle tip and the print bed and carefully push the bed against the tip before fastening the set screws. This way, you ensure a uniform bed - tip distance at all three leveling points.

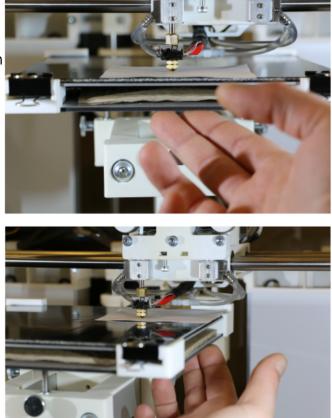

Manual leveling with paper spacer - front and hind right leveling point.

Calibrating the extrusion

The stability and dimensional accuracy of any printed object require a correct amount of filament conveyed through the nozzle. Too little extrusion and the part will be thin-walled, fragile and likely to break. Too much material is likely to clog the nozzle and ruin the print. The amount of material effectively conveyed through the nozzle is depending on:

- the 3D printer itself slight variations are possible due to the manufacturing process;
- the actual filament diameter in the range of the dimensional stability of the filament;
- the printed material's properties the extruder drive wheel grinds deeper into softer materials, thus reducing the actual diameter;
- the idler tension high tension will cause the drive wheels teeth to grind deeply into the filament, causing a dilation of the material and a reduced output.

To make sure that the print result is stable and accurate, an *extrusion multiplier* must be found for every material on every apparatus; it may be that this factor must be found for every spool of filament.

The correct extrusion multiplier is set in the slicing software, compensating for the above named variables.

To find the correct multiplier, open the Setup


menu at the GUI and choose [Calibrate Extrusion].

A detailed description for ABS filament can be found here.

For other materials, the same procedure applies but you have to prepare a G-code for the test print.



Choose the [Calibrate Extrusion] wizard from the Setup menu (either software version).

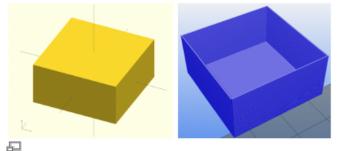

The 30x30x15 mm calibration cube as OpenSCAD model and ready sliced with Slic3r (view taken with Repetier-Host).

Add	Delete Delete Al	Arrange	Hore	Fever	4	CCW	45° cw	D Robabe	Scale	R Split	View/Cut	O Settings.
			Name			Copi	Scale				Print set	tings:
			calibration	ube_30k3	0415.98	1	100%				ECO	
											Filament	
											Kuehän	paraehli ;
	_										Printers	
1											singleD	GruderN (
	_										Expert	5-code
											Export	FTL
			-									
	X = 140		info Size: 3	0.00 × 30.0	0 x 15.0	0			Volume: 1	3500.00		
			Facets: 1 Manifold: 1	2 (1 shelb) es					Materials: 1			
orded call	brationCube_30x30x15	list!										

Load the calibration cube stl-file in Slic3r.

OUD (modified) 🚦 🔒 🍕	Layer height		
	Layer height:	0.25	mm
Layers and perimeters Infil	First layer height:	0.35	mm or %
G Speed	vertical shells		
Skirt and brim	Perimeters (minimum):	1	1
Nobes	Spiral vase:		_
Output options Whitiple Extruders	Horizortal shells		
Advanced	Solid leyers:	Top: 0	: Bottom: 3
	Quality (slower slicing)		
	Extra perimeters if needed:		
	Avoid crossing perimeters (slow):		
	Detect thin wells:	2	

Select the *Layers and perimeters* according to the adjacent table.


To create a G-code for the extrusion calibration, you need an stl-file of a cube with the dimensions 30x30x15 mm (download here).

Load the stl-file in Slic3r and select the *Print Settings* tab.

Choose the SOLID profile as a basis.

Choose the following settings to make the cube a box without a lid and only one perimeter of 0.5 mm thickness for a wall:

Layers and Perimeters → Vertical shells Perimeters (minimum)	1
Layers and Perimeters \rightarrow Horizontal shells Solid Layers TOP	0
Layers and Perimeters → Horizontal shells Solid Layers BOTTOM	3
Infill → Fill density	0 %
Advanced \rightarrow Default extrusion width	0.5

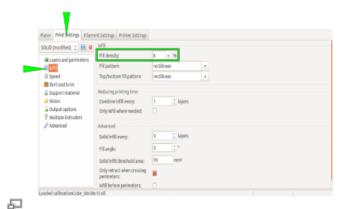

Select the Infill according to the adjacent table.

C Slate				
Plater Print Settings File	meat settings Printer set	cings.		
calibrationCubefa : + +				
W Layers and perimeter	teristi estudice sidth	0.1	mm or to (serve other auto)	
in the	THE WAS	15076	THE REPORT OF COMPANY	
Skirt and brim	Perimeters	0	ment or % (leave Offer default)	
🚊 Support material	External perimeters:	0	mm or % (leave Orlor default)	
G speed	INTE:	0	mm or % (leave Offer default)	
T Multiple Drawbers	to fid infit.	0	mm or % (keys Offer default)	
a Output eptions	Top solid infil:		mm or % (leave Offer default)	
I PROCESS	support material:	0	mm or m (leave other default)	
	flow			
	thridge from radius	1		
	Other			
	XV Size Compensation:		16.45	
	Threads:	2	1	

Select the *Default extrusion width* according to the adjacent table.

INFO



Saving these settings for Slic3r as an "extruder calibration" profile will make extruder calibration much more comfortable in the future.

Upload the G-code to your 3D printer, print it, measure the wall thicknesses, and calculate the mean value.

Then open the [Calibrate Extrusion] wizard and enter the mean value.



5

Adjust the preset "0.50 mm" value via the touch buttons and read the necessary extrusion multiplier directly from the display.

The displayed extrusion multiplier can be entered in Slic3r (Filament settings) and saved in the filament profile.



Enter the extrusion multiplier in Slic3r and save the filament profile (rename!).