# **Tips & Tricks**

## General

Here you will find information about general issues concerning the operation of the RepRap Industrial in your specific work environment.

#### Commandline Access to the linux operating system via SSH

Use SSH on your computer connected to the same LAN as your 3D printer to log in to the RepRap Industrials' built-in BeagleBone Black. You can use the hostname from the printers' Backend-URL and log in with the following access data:

User: kiosk Password: eight-digit combination from the serial number at the back of the device. Take the first two four-digit blocks - XX-AAAA-BBBB-CCCC-YYYY becomes an "AAAABBBB" password.

#### Setting a static IP address for RepRap Industrial ethernet connection

First, establish a commandline connection to the printer.

From within the terminal session, edit the network configuration via the command line editor "nano"

```
sudo nano /etc/network/interfaces
(use the same password as for the SSH connection)
```

The current DHCP setup looks like:

```
# The primary network interface
auto eth0
iface eth0 inet dhcp
pre-up iptables-restore </etc/iptables.rules</pre>
```

Change the setup according to your needs. Example:

```
# The primary network interface
auto eth0
iface eth0 inet static
address 192.168.1.20
netmask 255.255.255.0
network 192.468.1.0
broadcast 192.168.1.255
gateway 192.168.1.254
dns-search family.local
```

dns-nameservers 192.168.1.254
 pre-up iptables-restore </etc/iptables.rules</pre>

The rest of the file remains unchanged. Save the file using CTRL+X and confirm the overwrite query with "Y". Disconnect and finish by typing

exit

Shut down (see Manual control) and reboot (power-on button, 11 in fig. 4) the RepRap Industrial to establish the alterations.

#### Use a custom NTP server for time signals

First, establish a commandline connection to the printer.

From within the terminal session, stop the NTP daemon background process

sudo service ntp stop
(use the same password as for the SSH connection)

Edit the NTP daemon configuration via the command line editor "nano"

sudo nano /etc/ntp.conf

Search for the few lines beginning with

server ...

and add an additional new line before these with the address to your local NTP server like this

server 192.168.1.123

add another additional statement anywhere in this file

```
# ignore panic threshold for huge time differences tinker panic \boldsymbol{0}
```

The rest of the file remains unchanged. Save the file using CTRL+X and confirm the overwrite query with "Y".

Re-enable NTP client service for background operation

sudo service ntp start

Disconnect and finish by typing

exit

Shut down (see Manual control) and reboot (power-on button, 11 in fig. 4) the RepRap Industrial to

establish the alterations.

### Changing Shell Password in the BeagleBone Black Operating System

After manually creating a new Micro-SD Card from a pre-packaged upgrade release provided by *Kühling&Kühling*, the user account running the RepRapOnRails software in the Linux operating system will be in default configuration. To change the password, use SSH on your computer connected to the same LAN as your 3D printer to log in to the BeagleBone Black. You can use the hostname in the printers' Backend-URL as its address and log in with the following access data:

User: kiosk Password: kiosk

Now you can set a new password by entering

passwd

and following the instructions. In delivery condition the unique password is an eight-digit combination from the serial number at the back of the device. Take the first two four-digit blocks (example: XX-AAAA-BBBB-CCCC-YYYY becomes an "AAAABBBB" password).

## Handling 3D files

Any information we gather related to improving or easing the slicing process is listed in the following paragraphs.

#### Profile display problems in Slic3r for Windows

#### This bug will be fixed with the upcoming release of SLic3r v1.2.x.

It is a known problem that in Slic3r for Windows the drop-down lists for the profile selection are too narrow to display the full profile name. This can make it impossible to choose the correct profile when processing your slicing settings for creating a G-code.

		Side	- 0
a flato Nickos Rely			
later   Print Gettings   Flamme			
previolation (status = )	Exercise and coordinates		
default - antinophilanteling Testing	Red size	at 201 pt 100 mm	
athingdrivelying lights	Print caritac	a MI 5 20 mm	
attraction bailing	Zothet	10 mm	
prophytical data post			
	Acres of		
	il sole favor	Replac dilativ (prime Repair) n	
	Ere relative E distances		
	Capitalities		
	Educion	3	
		· 18	
	Advanced		
	Data farmane standars		
	Tribution knill;	1 10	

Narrow menus make it impossible to read the profile names in Slic3r v1.2.0 for Windows

Try the following to bypass the problem:

- Select a profile from the drop-down list and click the <save> symbol. This way, you make the profile name visible and editable.
- Delete the current profile name and replace it with a short description, e.g. "LEFT ONLY" instead of "Kuehling&Kuehling RepRap Industrial -LEFT EXTRUDER ONLY".
- The shorter description will be fully visible in the list.

Repeat these steps for all long profile names.

Los entable     Configuration     Configura	act         x (10)         y (10)
© Catalon Loose 2 office: Conductor Cond	
Primove Geodefine Geodefine Utersteinin Vitrativelin Vitrativelin Vitrativelin Geodefine Geodefine Vitrativelin Geodefine Vitrativelin Coster Vit	Note of the set
Code files Code files Code	
Los entados     Los entados     Los destrete     Los destretee     Los destreteee     Los destreteeeeeeeeeeeeeeeeeeeeeeeeeeeeeeeee	Note:     Note:     Note:     Note:
Capation Capati	Image: State
Libraders     Advanced     Libraders     Advanced     Libraders     Advanced     Libraders     Vitrative/lib     Control     Contro     Contro     Control     Control     Control	Image: Series Series         Image: Series Series           Series Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series           Series         Image: Series
Advanced Use Immer Versienen Printer Trons Staton Printer Trons Staton Biologianen Distanders Distanders Distanders Distanders	werendersetting innet 2 Na motioner settings accordinates accordinat
Lite transer vitrative in vitrative in vitra	Institution         Image:
Vibratenik Vibratenik Vibratelin Protestitung Randrugstavelin 1 () () () General General Vibrateni Vibr	Institute         Institute
Cashing     Prets Stating     Prets	Notar settings           xx/300         y/100           xx         100           y/100         mm           0         seprest           100101         seprest           100101         seprest           100101         seprest
Teleci Prets Esting Radengi Acatego Parenet Setting Radengi Acatego Parenet Setting Bad care Bad care Coole The Unit contex Coole The Coole The	xx200         y 100         mm           xx:         x 100         y 100         mm           0         mm         mm         mm
Teleci Prets Esting Radengi Acatego Parenet Setting Radengi Acatego Parenet Setting Bad care Bad care Coole The Unit contex Coole The Coole The	xx200         y 100         mm           xx:         x 100         y 100         mm           0         mm         mm         mm
Pieter Pret Settings / Planet Settings / Kanhogtanaten , ] (()) () () () () () () () () () () () (	xx200         y 100         mm           xx:         x 100         y 100         mm           0         mm         mm         mm
RanhingsKaeling 1 (1) (1) (1) (1) (1) (1) (1) (1) (1) (	xx200         y 100         mm           xx:         x 100         y 100         mm           0         mm         mm         mm
Colorenal (0) Coloren Goode 7) fostrader 1 Fainware Coole files Une following Coole files Defroit files Coole files Defroit files Coole files Defroit files Coole	ar: x (300 y (100 mm x (300 y (00 mm) ) mm ) mm ) mm ) for a foregreen (100 mm) (100
Capabor 9 Coston Code 9 Coston Code 9 Coston Code 9 Coston Code 1 Control Code 1 Code Take Use relative Dstroder:	ar x 190 y 19 mm a mm bitti the same sent the s
© Genomi v-Gode ♥ Batrader 1 Zoffhet: Fitmware Goode Raee Goode Raee Goode Raee Goode Raee Goode Raee Goode Raee	em
På meare Gode flav Ube relative Capels Extruders:	Not Seve preset
Goode Raw Use relative Capab Extruders:	NOVI Seve preset tum printer settings ac: TRECON Abhrester TRECON
Une relative Capab Extruders:	Vel di Suno printer settinge ac:
Capob Extruders:	TABLE AND A
Extruders:	attendar av
	z Abbrechen OK
Advanced	
Use firmwor	where retractions
Vibration lin	linit: 2 Hz
لير	
Plater PrintSettings FilamentSettings F	
LEFT ONDE : Size and coor	
Bed size:	
@ Custom 6-code Print center	
T Extruder 1 Z offset:	000 mm
Firmware	
G-code Rave	
Use relative	Ve E distances:
Capabilities	5
Extruders:	s 1 1
Advanced	
	vare retraction:
Worationlin	limit: ZZZ Hz

## Easy evaluation of .stl-data

Especially when using files downloaded from open internet sources it may be that these files are not suitable for printing due to export or modeling mistakes. Misaligned edges (non-manifolds) and holes can render a 3D model unprintable and make troubleshooting on the 3D printer an infinite displeasure because no obvious reason can be detected.

One quick and simple way to eliminate this as an error source is checking the suitability of your .stlfile for 3D printing. All you need is a program capable of analyzing the .stl-file's mesh. Slic3r itself can deal with minor troubles and the netfabb company offers a free basic version of their *netfabb studio*, an .stl-handling tool with repair functions. Other tools may be as helpful but these two are used to explain how to recognize a corrupted file.

<u>Slic3r part info:</u> (see <u>Slic3r manual</u> also) After opening a file in Slic3r, the info box in the bottom-right corner of the plater shows information on the model status. For a single, suitable part the info must look like: Factes: xxxxx (1 shells) Manifold: Yes

If it displays Manifold: Auto-repaired (xxxx errors) the file contains degenerations. It is most likely that it also shows an increased number of shells (e.g. Facets: xxxxx (6

Size:	40.94 x 40.94 x 20.00	)	Volume:	15447.04
Facets:	4180 (1 shells)		Materials:	1
Manifol	d: Yes			
	19.16 x 4.80 x 23.04 22462 (6 shells) Auto-repaired (7399 errors	Materials:	309.72 1	

Slic3r info box for a flawless (above) and a corrupted (below) part.

shells) because the part has been split. Also check the 3D preview for visible defects. In this case it is better to repair or reconstruct the model.


Regard that the auto-repair function of Sic3r is only suited for repairing minor defects.

Evaluation and repair with netfabb basic: (see netfabb basic manual also)

If you open a (supposedly broken) .stl in netfabb, the program will display a red warning sign in the bottom-right corner when the part is indeed faulty.

To see mismatches, run the part repair function by clicking on the red cross sign in the toolbar or via the *Extras* menu. The part is analyzed and all mesh information are displayed, including holes, invalid orientation etc. You can try using the auto-repair function or manually repair defects (very limited in the basic edition) to correct the part prior to newly exporting it as .stl.

If simple repair does not lead to satisfactorily results, redesigning or renouncing this specific part and choosing another one may be the best choices.

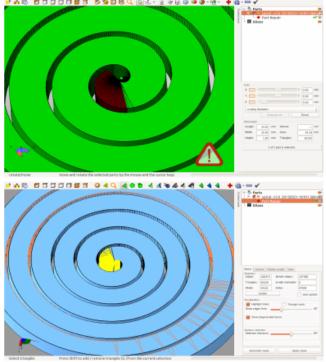

Ð

Alert of mismatches in an .stl and the preview of misaligned edges and holes in netfabb basic's part repair.

#### **Overhang - adjusting the layer thickness**

If you want to print filigree objects with overhanging structures without adding supports, try reducing the layer thickness for this print by 15 - 20%. This will result in a finer Z-axis resolution and increased overlay of subsequent layers so that more stability is gained over the height of the target object.

## Modifying infill and perimeters

There are currently two Slic3r profiles available at our GitHub repository that provide preset ready-toprint slicing settings. Her are some tips for handling these profiles to adjust them to your needs. The *SOLID* profile normally needs no modification since it comes with stable, reliable settings for printing solid objects with 100 % infill.

The *ECO* profile supplies settings for objects with loosened infill. This makes objects lighter and reduces the print time and the material consumption. To achieve good results, the settings may have to be adjusted.

We recommend to set the following always for printing ECO objects:

• A hull thickness of 1.0 to 1.5 mm. As a rule of thumb divide the hull thickness by the nozzle tip diameter and set the amount of perimeters equal to the result. Such, a closed, smooth and

stable hull is ensured.

- Honeycomb infill as it provides highest stability at optimal density.
- A minimum infill of 15 %.
- A maximum infill of 30 %. Increasing the infill further does not have a significant advantage compared to a solid body but strongly increases the printing time.

## Operation


In the following you will find more detailed descriptions of functions of the RepRap Industrial. In most cases, these are topics upraised by support requests or in-house lab experiments.

### **Print bed leveling**

Accurate leveling is vitally important for the print result. Although correct first layer settings can compensate for slight unevennesses of the print bed, false leveling will ruin a print within the first few layers. Evidence for a leveling mistake can be:

- 1. Asymmetrical layer thickness, especially of the first layer, due to lopsided leveling.
  - On one side of the print bed the extruded strand is laid on the print bed instead of being spread → the print bed and the nozzle are too far apart.
  - On the other side of the print bed the extruded strand is pressed onto the print bed until the nozzle tip is clogged → the print bed and the nozzle are too close.
- Smearing of the extrusion and possibly clogging of the nozzle due to too closely leveled bed.
- Strands do not stick to the print bed but are being pulled away by the nozzle tip. Of course, this can be due to a wrong bed temperature also – better double-check.
- 4. Extrusion of rounded, unjoined strands.

To avoid such irritations, make use of the following tips:

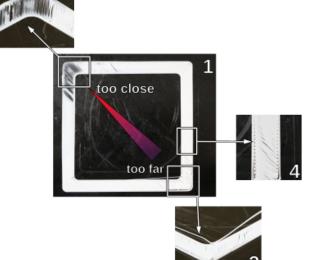

5

Leveling mistakes: examples of characteristic appearances of the first layer.

Leveling test is OK Leveling test is not OK

• Always make sure that the build chamber


is adequately and uniformly preheated to at least 90 % of the target temperature (e.g. 63 °C for ABS).

The Z-end stop is temperature sensitive and may cause deviating positioning when exposed to temperature variations. Keep the build chamber doors as shortly open as possible during leveling to avoid too much heat loss.

- If you removed the print bed, always reinsert it in the same direction and orientation it had during leveling.
- Put the print bed with the convex side down onto the print table.
- After adjusting all three leveling points, return the print head to the first position (tap the [Back] button). Check the bed tip distance by tapping (not pressing) the print bed with a finger next to the nozzle tip: if you see a gap appearing at the slightest touch, the leveling point is correctly adjusted. If even the least pressure is required, the leveling is too high. Repeat this at the other two leveling points. Have a look at the adjacent videos for visual explanation.
- Before waisting time on unsuccessful leveling, please rethink if the currently installed nozzle tip is adequate for the print job. Wider nozzles are more tolerant when it comes to compensating leveling mistakes and may be more suited to the task, especially when printing larger parts.

#### **Tips for easier leveling**

If you find it difficult to adjust the three leveling points uniformly with only the spring pressure, place a sheet of paper (not more than standard 80 g/m<sup>2</sup>) between the nozzle tip and the print bed and carefully push the bed against the tip before fastening the set screws. This way, you ensure a uniform bed - tip distance at all three leveling points.

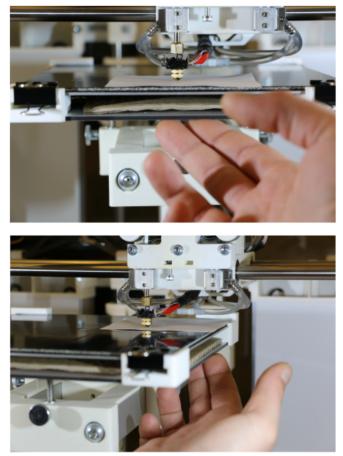

#### Ð

Manual leveling with paper spacer - front and hind right leveling point.

Another way of making leveling a little bit less important is "floating" your print on a raft. Slic3r (and most other slicing software) provides the "raft" function, a special kind of support material, which means that before starting with the actual object a (customizable) number of loosely printed layers is printed to compensate slight leveling mistakes. If you choose the raft settings correctly, beginning with a layer as wide and thick as allowable (depending on the nozzle tip's diameter) leveling will become a much less annoying process.

The raft's first layer is treated as the print's first the print. layer and uses the respective settings. The following layers of the raft are calculated according to the support material settings. Choose the maximal first layer height (*Slic3r*  $\rightarrow$ *Print Settings*  $\rightarrow$  *Layers and perimeters/First layer height*) and a first layer extrusion width of 250 % (*Slic3r*  $\rightarrow$  *Print Settings*  $\rightarrow$ *Advanced/Extrusion width -First layer*) for a compensating, condoning and stable raft. The raft can either be built of the model's material and cut away later or, if available for

OLID (modified) 🗄 🗎 🥥	Support material		
Layers and perimeters			
Infill Skirt and brim	Overhang threshold:	65	1
Support material	Enforce support for the first:	0	1 layers
Speed	Raft	-	
	Raft layers:	7	1 layers
Advanced Output options	L		
Notes	Options for support material	and raft	
	Contact Z distance:	0.2 (deta	achable) = mm
	Pattern	honeyco	+ dm
	Pattern spacing:	1.25	mm
	Pattern angle:	90	2 *
	Interface layers:	3	: layers
	Interface pattern spacing:	0.01	mm
	Don't support bridges:	2	

Adding a freely choosen number of raft layers to the print.

the specific plastic, of support material and broken off or dissolved. Check with the Materials' section to see if a secondary support material is available. For break-away or soluble rafts the dual extrusion function of the RepRap Industrial is required. Remember to check that all necessary calibrations and settings have been made as described in the Knowledgebase.

### Calibrating the extrusion

The stability and dimensional accuracy of any printed object require a correct amount of filament conveyed through the nozzle. Too little extrusion and the part will be thin-walled, fragile and likely to break. Too much material is likely to clog the nozzle and ruin the print. The amount of material effectively conveyed through the nozzle is depending on:

- the 3D printer itself slight variations are possible due to the manufacturing process;
- the actual filament diameter in the range of the dimensional stability of the filament;
- the printed material's properties the extruder drive wheel grinds deeper into softer materials, thus reducing the actual diameter;
- the idler tension high tension will cause the drive wheels teeth to grind deeply into the filament, causing a dilation of the material and a reduced output.

To make sure that the print result is stable and accurate, an *extrusion multiplier* must be found for every material on every apparatus; it may be that this factor must be found for every spool of filament.

The correct extrusion multiplier is set in the slicing software, compensating for the above named variables.

To find the correct multiplier, open the *Setup* menu at the GUI and choose [Calibrate Extrusion].

A detailed description for ABS filament can be found here.


For other materials, the same procedure applies but you have to prepare a G-code for the test print.

Idle		Emergency STOP
	t Control Log	
Wizards Print Bed Leveling United Filement Load Filement Prime Extraders	Nozzle Change Calibrate Extrusion Calibrate Extruder Offset	Web http://risidamorticks. http://risidamorticks. Software Venice: RegRay Endetting RegRay Endetting Microcontection Forward wenice: RepEter Firmeare v8.81-rri1.1.0-81
Left Extruder: 27.32 / 0 Right Extruder: 27.32 / statistics state income white color fabb.,x1	Chamber: 32.29 / 0 Bed: 60.29 / 60 Pretexting for Atto-PUTG built	Current / Target 10 Profile

Ð

Choose the [Calibrate Extrusion] wizard from the *Setup* menu (either software version).


To create a G-code for the extrusion calibration, you need an stl-file of a cube with the dimensions 30x30x15 mm (download here).

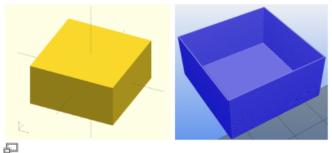


The 30x30x15 mm calibration cube as OpenSCAD model and ready sliced with Slic3r (view taken with Repetier-Host).

Plater Plate Strings Flameet Strings Plate Strings
Add... Defet & Defet & All Artings Plate Strings
Hore Power 40 cov 40 ou Botts... Solit Viex/Ct....Strings
Rester Viex/Ct...Strings
Rester Viex/C

Load the calibration cube stl-file in Slic3r.

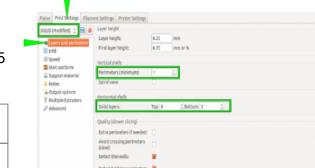

Select the *Layers and perimeters* according to the adjacent table.

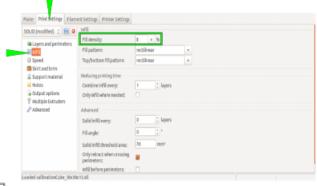

P

Select the *Infill* according to the adjacent table.

Plater Print Settings (His	meet Settings Printer Set	ings.	
calibrationCubels : + +			
Users and perimeter	Default extrusion width:	0.5	men or to (leave Orlar auto)
i udil.	100.000	150710	THE REPORT OF COMPANY
Thirt and brins	Perimeters:	0	men or % (leave Offer default)
ill Support material	External perimeters:	0	mm or % (leave this default)
G speed	INTE .	0	mm or % (leave Offer default)
T Multiple Extruders	solid infit:	0	mm or to (leave offer default)
Quint sotiers	Top solid infil:		mm-or N (leave Offer default)
d Notas	support material:	0	mm or m (leave ofter default)
	flow		
	thridge flow ratio:	1	
	Other		
	XV Size Compensation:		
	Threads:	2	

Load the stl-file in Slic3r and select the *Print Settings* tab.

Choose the *SOLID* profile as a basis.

Choose the following settings to make the cube a box without a lid and only one perimeter of 0.5 mm thickness for a wall:

Layers and Perimeters → Vertical shells Perimeters (minimum)	1
Layers and Perimeters $\rightarrow$ Horizontal shells Solid Layers TOP	0
Layers and Perimeters → Horizontal shells Solid Layers BOTTOM	3
Infill → Fill density	0 %
Advanced $\rightarrow$ Default extrusion width	0.5

Select the *Default extrusion width* according to the adjacent table.

INFO



Saving these settings as an "extruder calibration" profile will make this calibration much more comfortable in the future.

Upload the G-code to your 3D printer, print it, measure the wall thicknesses, and calculate the mean value.

Then open the [Calibrate Extrusion] wizard and enter the mean value.



Adjust the preset "0.50 mm" value via the touch buttons and read the necessary extrusion multiplier directly from the display.

The displayed extrusion multiplier can be entered in Slic3r (Filament settings) and saved in the filament profile.

Enter the extrusion multiplier in Slic3r and save the filament profile (rename!).

## Deactivating the heating elements after end of print job

Sometimes you may want to start a print job just before finishing time or the weekend. Since there is currently no automatic shutdown function, the 3D printer will then stay on all night respectively some days. With the following description you can alter the End G-code of your print so that the heating elements are shut off after the print job has been finished so that the power consumption is reduced significantly. A side effect is, that due to the fact that the build chamber needs some hours to channel off the heat the cooling process is slowed and thereby internal tensions of the printed object are reduced. To deactivate the heating elements after a print job:

• Open the [Printer Settings] tab in Slic3r and choose the *Custom G-code* menu.

- Activate the End G-code editor by clicking into the text field.
- Position the cursor in the last line before the ; /END-GCODE entry.
- Enter the command M104 S0 T2 This will set the heating elements of the build chamber to a temperature of 0 °C.
- Enter the command M140 S0 This will deactivate the print bed as the last action of the current G-code.

uehlingtKuehlin; 🚦 😐	Start G-code		
B Crenci © Contan Grade 7 Estrudo 1	; START-GCODE NET AND G4 52 G90 G28	: activatio build chamber : wait 2 seconds : une absolute coordinates Thome all uses	
	End Goode GR 20 GR 20 H104 S3 T0 H111 S8 (JUND-GCODE Layer change G co	Lement mehrus kon divisene Themme all konse Low ministre estander heuter off (Sum ministre estander heuter off (Sum ministre estander heuter off ) such firmware debugievet	
	Tool change G-cod		

Switching off the build chamber heating elements by modifying the Slic3r custom End G-code.

#### Adjusting the build chamber temperature

#### NOTICE

The build chamber temperature is preset to the maximal permissible temperature of +70 °C at delivery.

*Exceeding* +70 °C will damage interior components of the RepRap Industrial such as stepper motors, bearings and electronics.

됩

Since hitherto the RepRap Industrial is the only commercially available Open Source 3D printer with an actively heated build chamber, common slicing software does not feature ambient temperature settings. For some materials, it is advantageous to modify the chamber temperature together with the other temperature settings. The build chamber's temperature of the RepRap Industrial is set via the "Start G-code" which can be manually altered.

 Plater
 Print Settings
 Finter Settings

 LEFT EXTRUDER 0 : Image: Start C-code
 : reset extrusion distance

 Central
 : image: reset extrusion distance

 Constant Scote
 : image: reset extrusion distance

 Constant
 : image: reset extrusion distance

 M198 Sfirst: Lawer, hed: temperature! - set hed temperature and wait

 Entroder
 : IMO-CCODE

 Constant Scote
 : image: reset extrusion distance

 M32
 : image: reset extrusion distance

 M32
 : image: reset extrusion distance

 Construct
 : image: reset extrusion distance

 Construct
 : image: reset extrusion distance

 M33
 : image: reset extrusion distance

 Construct
 : image: reset extrusion distance

 Construct
 : image: reset extrusion distance

 Construct
 : image: reset extrusion distance

 Construct

2

To change the build chamber temperature (in the following example we use our standard *Slic3r* - other software may differ in denotations):

Changing the build chamber temperature by modifying the Slic3r custom Start G-code.

- 1. Open your slicing software.
- 2. Open the tab "Printer Settings".
- 3. Choose the *Start G-code* in the "Custom G-code" menu.
- 4. Scroll down to; PREHEAT BED AND CHAMBER and position the cursor in the line reading:

M104 S70 T2; set recirculating air heater to 70 degree celcius target temperature

5. Change the entry "Sxy" (here S70) by replacing the value xy with the desired temperature, for example 50° C:

M104 S50 T2; set recirculating air heater to 50 degree celcius target temperature

(for logical reasons, the comment should be aligned).

6. If you want to keep the settings, save them in a new profile (see Slic3r manual).

Any G-code exported with this profile loaded will heat the build chamber to the stated temperature prior to printing.

#### G-code manipulation at the GUI

The following list contains supported G-code commands that can be used on demand to directly interfere with a print procedure or setting via the G-code keyboard of the GUI's **Log** menu.



Ð

The G-code keyboard in the Log menu provides all keys to enter G-code commands.

Command	Effect	Example
G1	Coordinated Movement X Y Z E	G1 X130 Y85 Z1.75 E4.35
G4 S <seconds></seconds>	Wait for given duration in seconds	G4 S5 (waits 5 seconds)
G28	Home all axes	
G90	Use absolute coordinates	
G91	Use relative coordinates	
M80	Activate build chamber	
M82	Set E codes absolute (default)	
M83	Set E codes relative while in Absolute Coordinates (G90) mode	

Command	Effect	Example
M104 S <temp> T<extruder></extruder></temp>	Set temperature without wait	Adjusting the build chamber temperature, Deactivating the heating elements after end of print job
M109 S <temp> T<extruder></extruder></temp>	Set temperature with wait	
M140 S <temp></temp>	Set bed target temp without wait	
M190 S <temp></temp>	Set bed target temp with wait	
M221 S <extrusion flow<br="">multiplier in percent&gt;</extrusion>	Increase/decrease given flow rate	M221 S95 → decrease flow to 95 % of g-code value
M220 S <print speed<br="">multiplier in percent&gt;</print>	Increase/decrease print speed of all drive speeds	M220 S95 $\rightarrow$ decrease print speed to 95 % of g-code value