Tips & Tricks

General

Here you will find information about general issues concerning the operation of the RepRap Industrial in your specific work environment.

Setting a static IP address for RepRap Industrial ethernet connection

Use SSH on your computer connected to the same LAN as your 3D printer to log in to the RepRap Industrials' built-in BeagleBone Black. You can use the hostname from the printers' Backend-URL and log in with the following access data:

```
User: kiosk
Password: eight-digit combination from the serial number at the back of the
device. Take the first two four-digit blocks - XX-AAAA-BBBB-CCCC-YYYY
becomes an "AAAABBBB" password.
```

Edit the network configuration via the command line editor "nano"

```
sudo nano /etc/network/interfaces (use the above user and password)
```

The current DHCP setup looks like:

```
# The primary network interface
auto eth0
iface eth0 inet dhcp
pre-up iptables-restore </etc/iptables.rules</pre>
```

Change the setup according to your needs.

```
Example:
    # The primary network interface
    auto eth0
    iface eth0 inet static
    address 192.168.1.20
    netmask 255.255.2555.0
    network 192.468.1.0
    broadcast 192.168.1.255
    gateway 192.168.1.254
    dns-search family.local
    dns-nameservers 192.168.1.254
    pre-up iptables-restore </etc/iptables.rules</pre>
```

The rest of the file remains unchanged. Save the file using CTRL+X and confirm the overwrite query with "Y". Disconnect and finish by typing

Shut down (see Manual control) and reboot (power-on button, 11 in fig. 4) the RepRap Industrial to establish the alterations.

Changing Shell Password in the BeagleBone Black Operating System

After manually creating a new Micro-SD Card from a pre-packaged upgrade release provided by *Kühling&Kühling*, the user account running the RepRapOnRails software in the Linux operating system will be in default configuration. To change the password, use SSH on your computer connected to the same LAN as your 3D printer to log in to the BeagleBone Black. You can use the hostname in the printers' Backend-URL as its address and log in with the following access data:

User: kiosk Password: kiosk

Now you can set a new password by entering

passwd

and following the instructions. In delivery condition the unique password is an eight-digit combination from the serial number at the back of the device. Take the first two four-digit blocks (example: XX-AAAA-BBBB-CCCC-YYYY becomes an "AAAABBBB" password).

Slicing

Any information we gather related to improving or easing the slicing process is listed in the following paragraphs.

Profile display problems in Slic3r for Windows

This bug will be fixed with the upcoming release of SLic3r v1.2.x.

It is a known problem that in Slic3r for Windows the drop-down lists for the profile selection are too narrow to display the full profile name. This can make it impossible to choose the correct profile when processing your slicing settings for creating a G-code.

	Gattings Annual Annual		
and shake +	 Tor and combains 		
1	Bed size	a 201 p 100 mm	
Luting Taylor Luting Taylor	Post cardian	a MI 5/20 mm	
Hadding Rights Hadding Rights	Zother	9 mm	
المو بالغار لمع	Arrest		
	R-solt favor	Facility (distingly former Repetite) =	
	Energistics & statements	0	
	Capitalites		
	Educion:	2 10	
	Advanced		
	Dis formage stighters		
	Tribustion level;	4	
	5	-	

Narrow menus make it impossible to read the profile names in Slic3r v1.2.0 for Windows

Try the following to bypass the problem:

- Select a profile from the drop-down list and click the <save> symbol. This way, you make the profile name visible and editable.
- Delete the current profile name and replace it with a short description, e.g. "LEFT ONLY" instead of "Kuehling&Kuehling RepRap Industrial -LEFT EXTRUDER ONLY".
- The shorter description will be fully visible in the list.

Repeat these steps for all long profile names.

	Size and coordinates Bed size:	K 200 y 180 mm
i Ceneral	Print center:	x: 100 y 90 mm
© Custom 6-code 7 Extruder 1	Zoffuet	a mm
1. CHINGER 1		
	Firmware	
	G-code Havor: 😐 Save ;	
	Use relative it de Save privé	er settings as:
	Capit - C	Counting legitup induceral in Levi Lonistics Conty
	Extruders:	Abbrechen DK
	Advanced	
	Use firmware retractions	
	Vibration limit:	2 Hz
53		
e e il slicht		
Plater Print Settings Plame		
Kuehling&Kuehlin : 🔚 😐	Size and coordinates	
i Ceneral	Bed size:	x 200 y 180 mm
() Custom G-code	Print center:	x: 100 y: 10 mm
T Extrader 1	Z offset:	0 mm
	Pirmware	
	G-code flavori 😑 Save ;	preset
	Use relative E de Save print	er settings as:
	Capab	
	Extruders:	Abbrechen DK
	Advanced	
	Use firmware retractions	
	Vibration limit:	2 14
52		
June 1		
Plater Print Settings Filame	et Settings Prinker Settings	
LEFT ONLY : E	Size and coordinates	
	Bed size:	x 2002 y 1801 mm
@ Custom G-code	Print center:	a: 1001 y: 9996 mm
T Extruder 1	Z offset:	000 mm
	Firmware	
	Goode Revor:	RepRep (Marlin/Sprinter/Repetier) *
	Use relative E distances:	
	Capabilities	
	Extruders:	1
		(* lai
	Advanced	
	Use firmware retraction:	
		222 H2
	Vbration/Imit:	115 Th
	Vbration/imit:	110

Overhang - adjusting the layer thickness

If you want to print filigree objects with overhanging structures without adding supports, try reducing the layer thickness for this print by 15 - 20%. This will result in a finer Z-axis resolution and increased overlay of subsequent layers so that more stability is gained over the height of the target object.

First layer

The adhesion of the first layer to the print bed is extremely important to minimize warping (see this article also). To optimize the adhesion, some Slic3r settings should be adjusted.

INFO



The following applies to the nozzle tip size 0.35 mm and the preset Slic3r profiles you installed during initial commissioning. It is meant to give you an overview of the settings relevant for the optimization of the first layer adhesion. Please experiment to find the settings best suited for your task and test all



settings before applying them to your final model if you use other nozzle sizes.

• Set the layer thickness of the first layer ("First layer height") to a value equaling the diameter of the nozzle tip bore **and**



Slic3r Print Settings - setting the first layer height

increase the extrusion width to 150 %.


Both measures compensate for unevennesses of the print bed and increase the tolerance against slight leveling mistakes. The distance between nozzle tip and print bed will assure that the bore is not clogged when passing convex bumps by leaving enough free space in between. The extrusion width will Slic3r Advanced Settings - reducing the first make sure that enough material is conveyed to equalize concave crudities.

- Make sure that the first layer extrusion speed does not exceed 25 mm/s (less for nozzle tips ≤ 0.35 mm). Due to the higher heat transfer and the less sudden cooling the adhesion is increased.
- Optimize the extrusion and print bed temperature for the filament currently installed.


Do not hesitate to try different settings here, since even colored additives may alter the optimal extrusion temperature.

Plater Print Settings Plaree	nt Settings Printer Setting	3	
reprapindustrial : 🗃 🛛	Extrusion width		
Layers and perimeters will Speed Skit and brin Soport material Hotom Output eptiens Wultiple Listraters Multiple Listraters Advanced	Default extrusionwidth: First layer: Perimetens: Will: Solid infil: Top solid infil: Support material: Flow: Birldge flownatio:	0 150% 0.5 0 0 0 0 1	am or the diserve filter default) Ann or the diserve filter default)
	Other Threads: Resolution:	2	: (more speed but more memory usage) mm
Version 1.1.5 - Remember to che	ck for updates at Mtp://slict	Karg/	

layer extrusion width

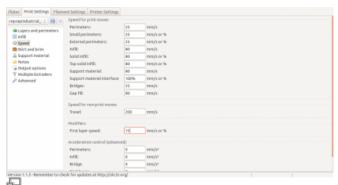

Slic3r Print Settings - setting the first layer extrusion speed

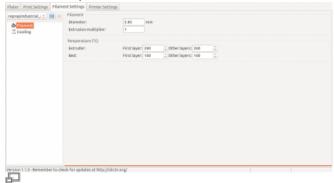

 For filigree or thin-walled objects add a 3 to 6 mm brim and/or 3 to 8 raft layers to increase the effective adhering area (see Slic3r manual also).

Slic3r Filament Settings - setting the first layer extrusion temperature



Slic3r Print Settings - adding a brim

eprapindustrial_; 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	staport material staport material Cenerale staport material Oversay threshold: Enforce support for Herrit: 0 2 lawrs	
Skirt and brim	Raft Layers	
Wuitiple Estruders P Advanced Advanced	Options for support material and naft Pettern Pattern spacings Z.5 Pettern spacings Pettern spacings	
	Proversingle: Vie Inderface layers: Inderface pattern spacing: Don's support bridges:	
	ennis ingenis in regun	
ersion 1.1.5 - Remember to d	teck for updates at Mtp.//sicticorg/	

Slic3r Print Settings - adding raft layers

Modifying infill and perimeters

There are currently two Slic3r profiles available at our GitHub repository that provide preset ready-toprint slicing settings. Her are some tips for handling these profiles to adjust them to your needs. The *SOLID* profile normally needs no modification since it comes with stable, reliable settings for printing solid objects with 100 % infill.

The *ECO* profile supplies settings for objects with loosened infill. This makes objects lighter and reduces the print time and the material consumption. To achieve good results, the settings may have to be adjusted.

We recommend to set the following always for printing ECO objects:

- A hull thickness of 1.0 to 1.5 mm. As a rule of thumb divide the hull thickness by the nozzle tip diameter and set the amount of perimeters equal to the result. Such, a closed, smooth and stable hull is ensured.
- Honeycomb infill as it provides highest stability at optimal density.
- A minimum infill of 15 %.
- A maximum infill of 30 %. Increasing the infill further does not have a significant advantage compared to a solid body but strongly increases the printing time.

Operation

In the following you will find more detailed descriptions of functions of the RepRap Industrial. In most cases, these are topics upraised by support requests or in-house lab experiments.

Print bed leveling

The PEI print beds delivered with every RepRap Industrial are custom-made specially to our needs. Due to the manufacturing process, they may show bends and curves which can make handling them a bit tricky. These flaws are accepted due to the superior properties of PEI compared to other subsurfaces when printing ABS. Follow the tips given below and you should have no trouble achieving perfect results.


Of course, the PEI print bed is, like the whole RepRap Industrial, optimized for printing ABS. It also works fine with HIPS, PET-Copolyester, PVA and thermoplastic urethane (TPE-U). Other materials may require a different subsurface, be it another material or a special treatment with tape or glue. Find more information about materials and printing them with a RepRap Industrial in our Knowledgebase.

Accurate leveling is vitally important for the print result. Although correct first layer settings can compensate for slight unevennesses of the print bed, false leveling will ruin a print within the first few layers. Evidence for a leveling mistake can be:

- 1. Asymmetrical layer thickness, especially of the first layer, due to lopsided leveling.
 - On one side of the print bed the extruded strand is laid on the print bed instead of being spread → the print bed and the nozzle are too far apart.
 - On the other side of the print bed the extruded strand is pressed onto the print bed until the nozzle tip is clogged → the print bed and the nozzle are too close.
- Smearing of the extrusion and possibly clogging of the nozzle due to too closely leveled bed.
- Strands do not stick to the print bed but are being pulled away by the nozzle tip. Of course, this can be due to a wrong bed temperature also – better double-check.
- 4. Extrusion of rounded, unjoined strands.

To avoid such irritations, make use of the following tips:

 Always make sure that the build chamber is adequately and uniformly preheated to at least 90 % of the target temperature (e.g. 63 °C for ABS).
 The Z-end stop is temperature sensitive

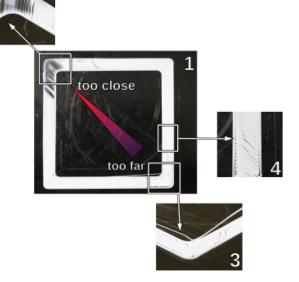

Ð

Leveling mistakes: examples of characteristic appearances of the first layer.


Leveling test is OK Leveling test is not OK

and may cause deviating positioning when exposed to temperature variations. Keep the build chamber doors as shortly open as possible during leveling to avoid too much heat loss.

- If you removed the print bed, always reinsert it in the same direction and orientation it had during leveling.
- Put the print bed with the convex side down onto the print table.
- After adjusting all three leveling points, return the print head to the first position (tap the [Back] button). Check the bed tip distance by tapping (not pressing) the print bed with a finger next to the nozzle tip: if you see a gap appearing at the slightest touch, the leveling point is correctly adjusted. If even the least pressure is required, the leveling is too high. Repeat this at the other two leveling points. Have a look at the adjacent videos for visual explanation.
- Before waisting time on unsuccessful leveling, please rethink if the currently installed nozzle tip is adequate for the print job. Wider nozzles are more tolerant when it comes to compensating leveling mistakes and may be more suited to the task, especially when printing larger parts.

Tips for easier leveling

If you find it difficult to adjust the three leveling points uniformly with only the spring pressure, place a sheet of paper (not more than standard 80 g/m²) between the nozzle tip and the print bed and carefully push the bed against the tip before fastening the set screws. This way, you ensure a uniform bed - tip distance at all three leveling points.

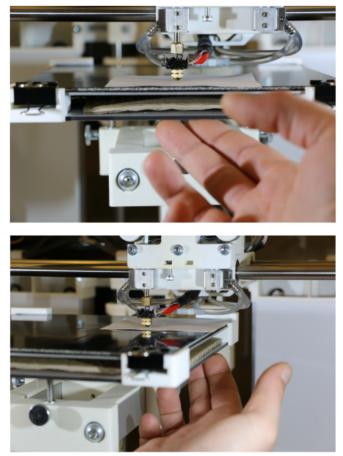

Ð

Manual leveling with paper spacer - front and hind right leveling point.

Another way of making leveling a little bit less important is "floating" your print on a raft. Slic3r (and most other slicing software) provides the "raft" function, a special kind of support material, which means that before starting with the actual object a (customizable) number of loosely printed layers is printed to compensate slight leveling mistakes. If you choose the raft settings correctly, beginning with a layer as wide and thick as allowable (depending on the nozzle tip's diameter) leveling will become a much less annoying process.

The raft's first layer is treated as the print's first the print. layer and uses the respective settings. The following layers of the raft are calculated according to the support material settings. Choose the maximal first layer height (*Slic3r* \rightarrow *Print Settings* \rightarrow *Layers and perimeters/First layer height*) and a first layer extrusion width of 250 % (*Slic3r* \rightarrow *Print Settings* \rightarrow *Advanced/Extrusion width -First layer*) for a compensating, condoning and stable raft. The raft can either be built of the model's material and cut away later or, if available for

OLID (modified) 🗄 🗎 🥥	Support material		
Layers and perimeters			
Infill Skirt and brim	Overhang threshold:	65	1
Support material	Enforce support for the first:	0	1 layers
Speed	Raft		
	Raft layers:	7	1 layers
Advanced Output options			
Notes	Options for support material	and raft	
	Contact Z distance:	0.2 (deta	achable) = mm
	Pattern	honeyco	+ dm
	Pattern spacing:	1.25	mm
	Pattern angle:	90	2 *
	Interface layers:	3	: layers
	Interface pattern spacing:	0.01	mm
	Don't support bridges:	2	

Adding a freely choosen number of raft layers to the print.

the specific plastic, of support material and broken off or dissolved. Check with the Materials' section to see if a secondary support material is available. For break-away or soluble rafts the dual extrusion function of the RepRap Industrial is required. Remember to check that all necessary calibrations and settings have been made as described in the Knowledgebase.

Calibrating the extrusion

The stability and dimensional accuracy of any printed object require a correct amount of filament conveyed through the nozzle. Too little extrusion and the part will be thin-walled, fragile and likely to break. Too much material is likely to clog the nozzle and ruin the print. The amount of material effectively conveyed through the nozzle is depending on:

- the 3D printer itself slight variations are possible due to the manufacturing process;
- the actual filament diameter in the range of the dimensional stability of the filament;
- the printed material's properties the extruder drive wheel grinds deeper into softer materials, thus reducing the actual diameter;
- the idler tension high tension will cause the drive wheels teeth to grind deeply into the filament, causing a dilation of the material and a reduced output.

To make sure that the print result is stable and accurate, an *extrusion multiplier* must be found for every material on every apparatus; it may be that this factor must be found for every spool of filament.

The correct extrusion multiplier is set in the slicing software, compensating for the above named variables.

To find the correct multiplier, open the *Setup* menu at the GUI and choose [Calibrate Extrusion].

A detailed description for ABS filament can be found here.


For other materials, the same procedure applies but you have to prepare a G-code for the test print.

Idle		Emergency STOP
	t Control Log	
Wizards Print Bed Leveling United Filament Load Filament Prime Extraders	Nozzle Change Calibrate Extrusion Calibrate Extruder Offset	Web http://risidamorticks. http://risidamorticks. Software Venice: RegRay Endetting RegRay Endetting Microcontection Forward wenice: RepEter Firmeare v8.81-rri1.1.0-81
Left Extruder: 27.32 / 0 Right Extruder: 27.32 / statistics status white contribute, x1	Chamber: 32.29 / 0 Bed: 60.29 / 60 Pretexting for Atto-PUTG built	Current / Target 10 Profile

Ð

Choose the [Calibrate Extrusion] wizard from the *Setup* menu (either software version).


To create a G-code for the extrusion calibration, you need an stl-file of a cube with the dimensions 30x30x15 mm (download here).

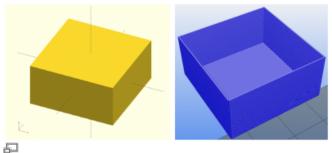


The 30x30x15 mm calibration cube as OpenSCAD model and ready sliced with Slic3r (view taken with Repetier-Host).

Plater Plate Strings Flameet Strings Plate Strings
Add... Defet & Defet & All Artings Plate Strings
Hore Power 40 cov 40 ou Botts... Solit Viex/Ct....Strings
Rester Viex/Ct...Strings
Rester Viex/C

Load the calibration cube stl-file in Slic3r.

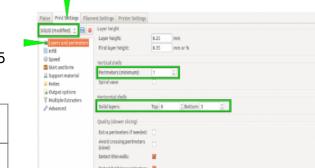

Select the *Layers and perimeters* according to the adjacent table.

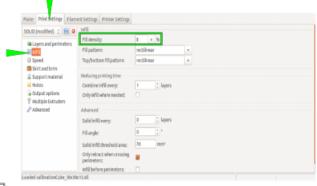

P

Select the *Infill* according to the adjacent table.

Plater Print Settings (His	ment Settings Printer Set	cimps.	
calibrationCubels : + +		_	
Users and perimeter	Default extrusion width:	0.1	men or to (ensue Orlan auto)
i udil.	100.000	15074	THE REPORT OF CARDIN
Skirt and brim	Perimeters:	0	mm or % (boxe Ofter default)
ill Support material O speed T Multiple Extruders	External perimeters:	0	mm-or % (leave orler default)
	INTE .	0	mm or % (leave Offer default)
P Melopie Distates	solid infit:	0	mm or % (leave offer default)
Quint actions	Top solid infil:		mm or % (leave Offer default)
di Notas	support material:	0	mm or m (leave ofter default)
	flow		
	thridge flow ratio:	1	
	Other .		
	XV Size Compensation:		n.m.
	Threads:	2	1

Load the stl-file in Slic3r and select the *Print Settings* tab.

Choose the *SOLID* profile as a basis.

Choose the following settings to make the cube a box without a lid and only one perimeter of 0.5 mm thickness for a wall:

Layers and Perimeters → Vertical shells Perimeters (minimum)	1
Layers and Perimeters \rightarrow Horizontal shells Solid Layers TOP	0
Layers and Perimeters → Horizontal shells Solid Layers BOTTOM	3
Infill → Fill density	0 %
Advanced \rightarrow Default extrusion width	0.5

Select the *Default extrusion width* according to the adjacent table.

INFO



Saving these settings for Slic3r as an "extruder calibration" profile will make extruder calibration much more comfortable in the future.

Upload the G-code to your 3D printer, print it, measure the wall thicknesses, and calculate the mean value.

Then open the [Calibrate Extrusion] wizard and enter the mean value.



Adjust the preset "0.50 mm" value via the touch buttons and read the necessary extrusion multiplier directly from the display.

The displayed extrusion multiplier can be entered in Slic3r (Filament settings) and saved in the filament profile.

Ð

Enter the extrusion multiplier in Slic3r and save the filament profile (rename!).

Direct G-code manipulation

The following list contains supported G-code commands that can be used on demand to alter the start and end G-codes in Slic3r or for direct input via the G-code keyboard in the *Log* menu.

Command	Effect	Example
G1	Coordinated Movement X Y Z E	G1 X130 Y85 Z1.75 E4.35
G4 S <seconds></seconds>	Wait for given duration in seconds	G4 S5 (waits 5 seconds)
G28	Home all axes	
G90	Use absolute coordinates	
G91	Use relative coordinates	

Command	Effect	Example
M80	Activate build chamber	
M82	Set E codes absolute (default)	
183 Set E codes relative while in Absolute Coordinates (G90) mode		
M104 S <temp> T<extruder></extruder></temp>	Set temperature without wait	ex1, ex2
M109 S <temp> T<extruder></extruder></temp>	Set temperature with wait	
M140 S <temp></temp>	Set bed target temp without wait	
M190 S <temp></temp>	Set bed target temp with wait	
M221 S <extrusion flow<br="">multiplier in percent></extrusion>	Increase/decrease given flow rate	M221 S95 → decrease flow to 95% of current value

Deactivating the heating elements after end of print job

Sometimes you may want to start a print job just before finishing time or the weekend. Since there is currently no automatic shutdown function, the 3D printer will then stay on all night respectively some days. With the following description you can alter the End G-code of your print so that the heating elements are shut off after the print job has been finished so that the power consumption is reduced significantly. A side effect is, that due to the fact that the build chamber needs some hours to channel off the heat the cooling process is slowed and thereby internal tensions of the printed object are reduced. To deactivate the heating elements after a print job:

- Open the [Printer Settings] tab in Slic3r and choose the *Custom G-code* menu.
- Activate the End G-code editor by clicking into the text field.
- Position the cursor in the last line before the ; /END-GCODE entry.
- Enter the command M104 S0 T2 This will set the heating elements of the build chamber to a temperature of 0 °C.
- Enter the command M140 S0 This will deactivate the print bed as the last action of the current G-code.

Adjusting the build chamber temperature

NOTICE

The build chamber temperature is preset to the maximal permissible temperature of +70 °C at delivery.

Plater Print Settings File	ment Settings Prints	er Settings	
and Producting () () () () () () () () () () () () () () () (: Antherine build character maint z ancodas uner absolution transmission : Internet solution folderson : Internet solution folderson : Than and asset: : Than as	

Version

Switching off the build chamber heating elements by modifying the Slic3r custom End Gcode. *Exceeding* +70 °C will damage interior components of the RepRap Industrial such as stepper motors, bearings and electronics.

Since hitherto the RepRap Industrial is the only commercially available Open Source 3D printer with an actively heated build chamber, common slicing software does not feature ambient temperature settings. For some materials, it is advantageous to modify the chamber temperature together with the other temperature settings. The build chamber's temperature of the RepRap Industrial is set via the "Start G-code" which can be manually altered.

To change the build chamber temperature (in the following example we use our standard *Slic3r* - other software may differ in denotations):

- 1. Open your slicing software.
- 2. Open the tab "Printer Settings" and choose "Custom G-code".
- 3. Go to the line reading:

M104 S70 T2; set recirculating air heater to 70 degree celcius target temperature

 Change the entry "Sxy" (here S70) by replacing the value xy with the desired temperature, for example 50° C:

M104 S50 T2; set recirculating air heater to 50 degree celcius target temperature

(for logical reasons, the comment should be aligned)

5. If you want to keep the settings, save them in the profile (see Slic3r manual).

Any G-code exported with this profile loaded will heat the build chamber to the stated temperature prior to printing.

LEFT EXTRUDER O 🗧 🗎	Image: Start G-code G92 E0 TO ; ensure that left extruder is selected
Custom G-code TExtruder 1	; PREHEAT BED AND CHAMBER M104 570 172 ; set recirculating air heater to 70 degree celcius target hemorature
	G12100 ; move bed to chamber center for faster heating distant fro eir flow M190 SIffirst_laver_bed_temoerature1 : set hed temoerature and wait
	End G-code
	: END-GCODE
	G92 E0 : reset extrusion distance MB3 : use relative distances for extrusion
	G1 F1440.000 E-1.5 ; retract lastly active extruder MB2 ; use absolute distances for extrusion
	C90 ; use absolute coordinates C92 E0 : reset extrusion distance
	C28 home all axes
	Before layer change G-code

Changing the build chamber temperature by modifying the Slic3r custom Start G-code.